



# Setup Guide for AirPrint

## 1. Preparation

Please check Wi-Fi function is ON before setting up for Air Print without router.

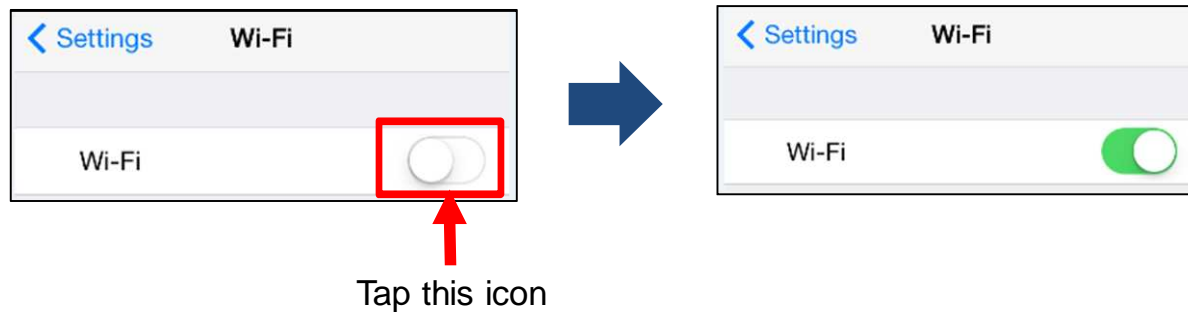

## 2. Setup with router

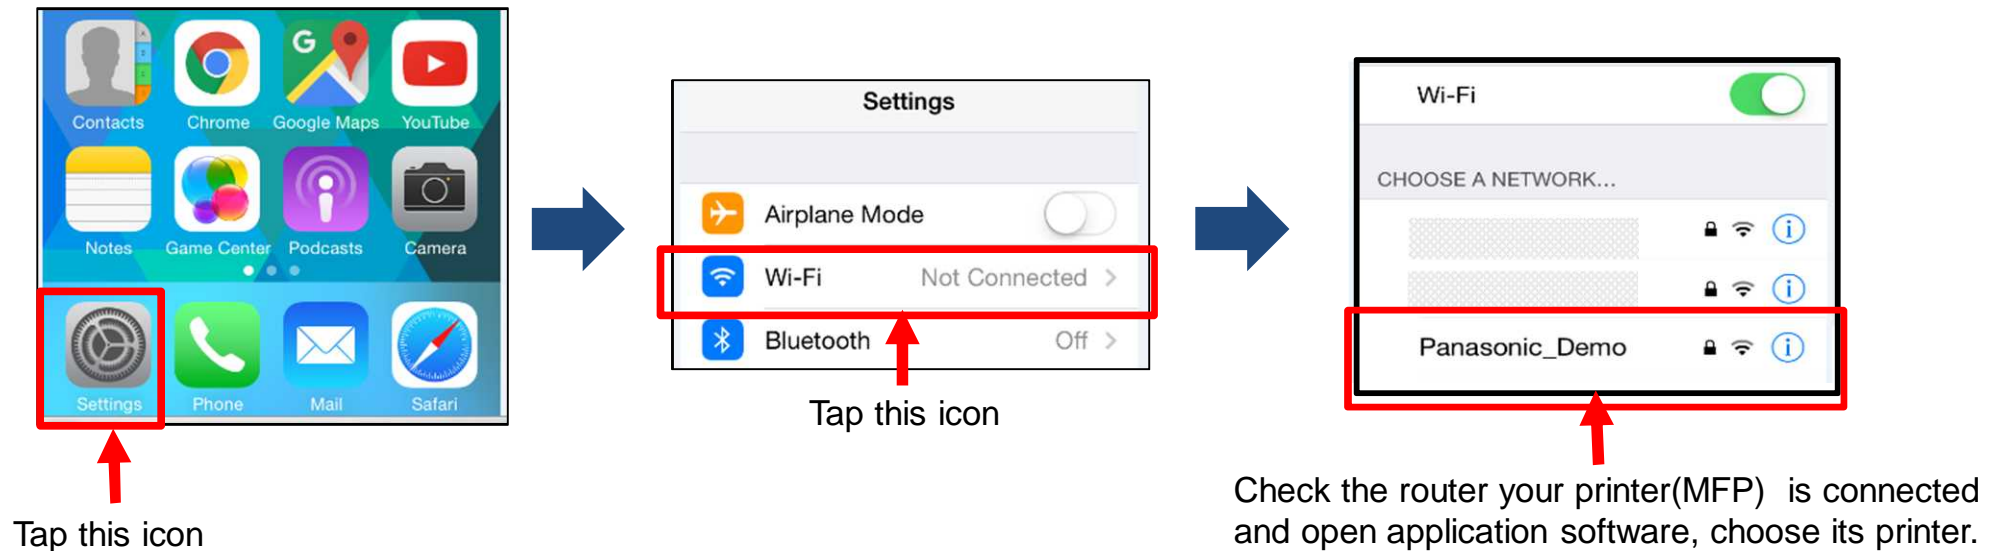

### 3. Setup without router (From second time, refer to page 5.)

MFP

POWER SAVE  
02 Jan. 0:42

COPIES:01  
COPY:PRESS START

Mobile device

Follow the procedure in below by confirming each LCD message.

1 Press



WIRELESS LAN SET  
OR PRESS OK

WIRELESS LAN SET  
PRESS [▶]

2 Press



Wi-Fi Direct SET  
OR PRESS OK

Wi-Fi Direct SET  
PRESS [▶]


3 Press



START CONNECT  
ON P2P DEVICE

SSID [▼▲]  
DIRECT-MB311-23C

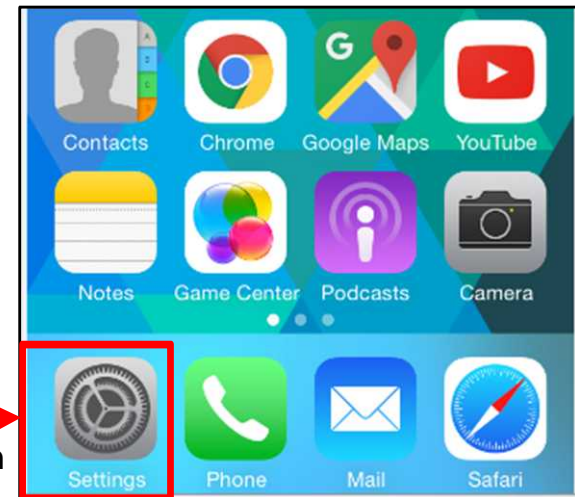


Tap this icon



(Continue to next page.)


MFP

Mobile device

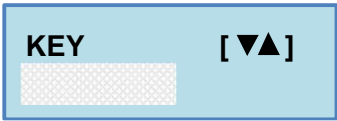4 Press  or   (Continue to next page.)




Enter password displayed on MFP LCD and tap Join button.

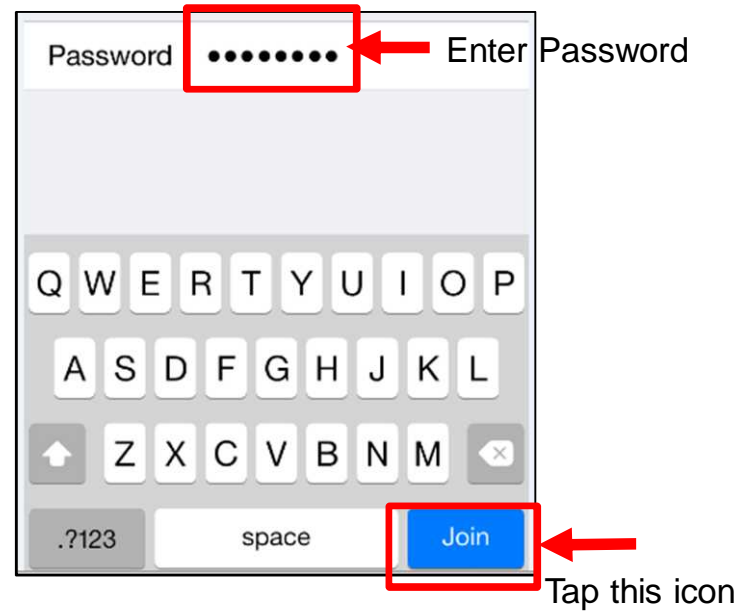

## MFP



 WPS LED is turned ON  
when MFP is connected.




When WPS LED is turned OFF,  
please re-connect it again.  
(Refer to next page.)

CONNECTED



COPIES:01  
COPY:PRESS START


## Mobile device

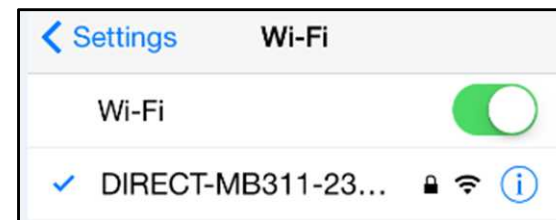


### 3. Setup for second time to same MFP

MFP

 
Mobile device



**1** Press  **WIRELESS LAN SET OR PRESS OK**

↑ ↓

**WIRELESS LAN SET PRESS [▶]**


**2** Press  **Wi-Fi Direct SET OR PRESS OK**

↑ ↓

**Wi-Fi Direct SET PRESS [▶]**

**3** Press  **START CONNECT ON P2P DEVICE**

(Continue to next page.)

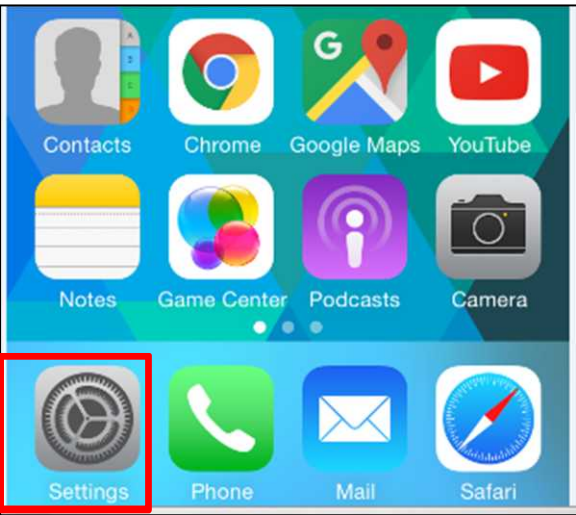Tap this icon → 

MFP



WPS LED is turned ON when MFP is connected.

CONNECTED



COPIES:01  
COPY:PRESS START

Mobile device

